



FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

ASSEMBLY INSTRUCTIONS

Kitchen Oven Cabinets

(This assembly instruction sheet applies for all our Oven Cabinets)

PLEASE HAVE A RELIABLE PERSON TO ASSIST YOU DURING OVEN ASSEMBLY

❖ General Instruction

- Read the instruction carefully before starting the installation.
- Follow all generally accepted safety procedures during assembly.

❖ Parts List: The following items are included in the carton.


| ITEM | DESCRIPTION | Qty. |
|------|---------------------------|---|
| A | Face Frame w/ 2 Doors | 1 |
| B | Side Panel (Right & Left) | 2 |
| C | Top Panel | 1 |
| D | Bottom Panel | 4 |
| E | Back Panel | 1 |
| F | Toe Kick | 1 |
| G | Drawer Face | 1 (OC3384/OC3390/OC3396) 2 (OC3396 for COG, MM and AWK only) |
| H | Drawer Box | 1 (OC3384/OC3390/OC3396) 2 (OC3396 for COG, MM and AWK only) |
| I | Slider (pair) | 1 (OC3384/OC3390/OC3396) 2 (OC3396 for COG, MM and AWK only) |

NOTE: FACE FRAME & DOOR for BCF and BCR are in separate carton.
Assembly Instruction is using OC3396 (2 drawers) as sample.


❖ Instruction

- **STEP 1:** Lay (E) flat, grooves facing upward. Insert (B) into metal clips on (E).
- **STEP 2:** Slide (C) and (D) into grooves of (B) and (E).

STEP 1

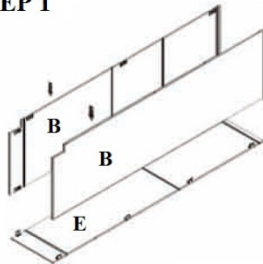

STEP 2

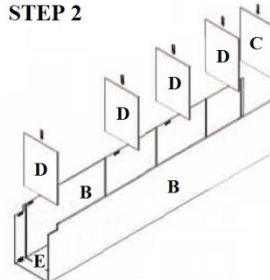

14242 Proctor Ave. City of Industry, CA. 91746 • t. 626.333.2388 • f. 626.934.9856

www.cabinetswarehouse.com



FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION


- **STEP 3:** Attach (A) onto (B) and (D). Attach (F) onto bottom front of (B) using the metal clips.
- **STEP 4:** Screw the drawer face (G) onto the drawer box (H) through the pre-drilled holes.

LD/BN/MC/BCR/BCF/BE Drawer needs to be assembled as follow:



Put Side (b) into Drawer Front (a), align and confirm that all is flush. Then, insert the slid Drawer Bottom (c) into the grooves of the Drawer Sides (b) position Drawer Back (d) as shown below picture.

MM/AWK/AW/COG Drawer Box has been assembled

STEP 3

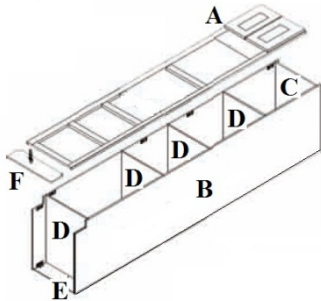

STEP 4

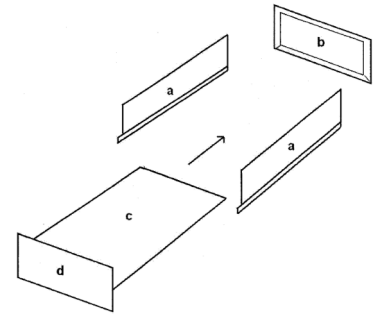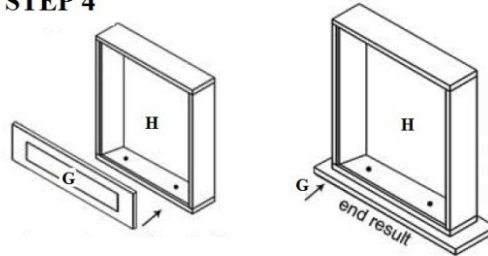


- **STEP 5:** Screw both rear slider holders into the pre-drilled holes in (E) so that angle faces inward. Install (I) by sliding into slider holders and screwing into side of (A).
- **STEP 6:** Position drawer box (H) over drawer slider (I). Then close drawer.

BE Drawers: Slide drawer glides into clips so that click and attach.

INSTRUCTION of the FULL EXTENSION UNDERMOUNTSLIDER Installation for MM/AWK/AW/ COG/BE: 3pg

STEP 5

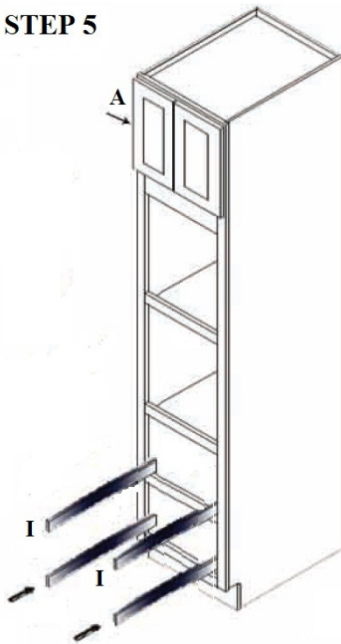

STEP 6

