



FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

ASSEMBLY INSTRUCTIONS

Kitchen Wall Blind Corner Cabinets

(This assembly instruction sheet applies for all our Wall Blind Corner Cabinets.)

❖ General Instruction

- Read the instruction carefully before starting the installation.
- Follow all generally accepted safety procedures during assembly.

❖ Parts List: The following items are included in the carton.


| ITEM | DESCRIPTION | Qty. |
|------|---------------------------|--|
| A | Front Frame w/ Door | 1 (w/1 door) BCR/BCF, BN, BE, MC, MM, COG, AWK 1 (w/2 doors) LD |
| B | Side Panel (Right & Left) | 2 |
| C | Top/Bottom Panel | 2 |
| D | Back Panel | 1 |
| E | Shelf | 2 (WBC2730/WBC2736, WBC3630/WBC3636) 3 (WBC2742, WBC3642) |

NOTE: DOOR & DRAWER FACE for BCF and BCR are in separate carton


❖ Instruction

- **STEP 1:** Lay (B) flat, grooves facing up and insert both (C)'s into metal clips of (B). Insert (B) into metal clips of both (C)'s.
- **STEP 2:** Slide (D) into (B) Left and Right.

STEP 1

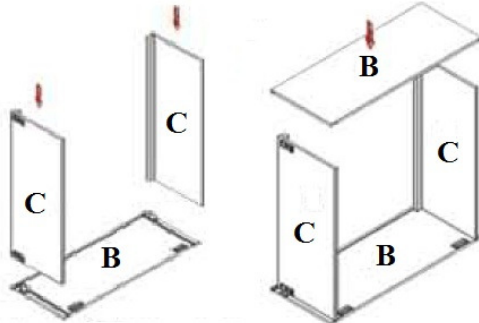

STEP 2

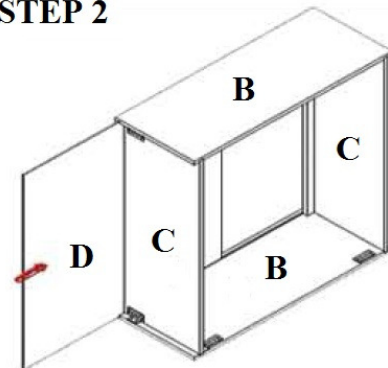




FU XIANG CABINETS WAREHOUSE


KITCHEN • BATH • ORGANIZATION

- **STEP 3:** Attach (A) to (C) so that the metal clips engage.
- **STEP 4:** Screw Screws through ((D) into (C) Top and Bottom.

STEP 3

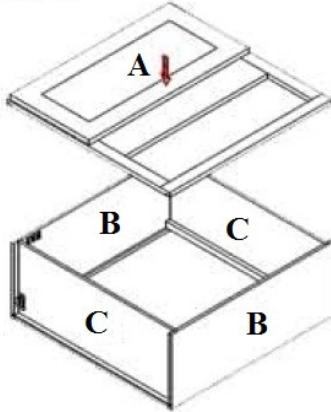

STEP 4

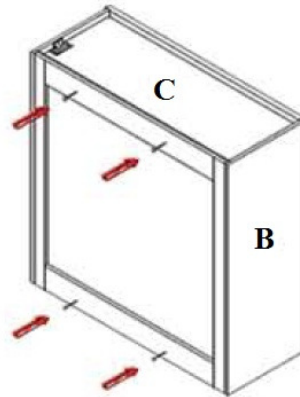

- **STEP 5:** Insert shelf clips into (B), slide shelf (E), and ensure.

STEP 5

