



# FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

## ASSEMBLY INSTRUCTIONS

### Kitchen Diagonal Corner Wall Cabinets

(This assembly instruction sheet applies for all our Diagonal Corner Wall Cabinets.)

#### ❖ General Instruction

- Read the instruction carefully before starting the installation.
- Follow all generally accepted safety procedures during assembly.


#### ❖ **Parts List:** The following items are included in the carton.

ITEM	DESCRIPTION	Qty
A	Face Frame w/ Door	1
B	Front Side Panel	2 (Left & Right)
C	Rear Side Panel	2 (Left & Right)
D	Bottom	1
E	Top	1
F	Back Panel	1
G	Shelf	2 Shelves for 30"H/36"H Wall Cabinet 3 Shelves for 42"H Wall Cabinet

**NOTE:** FACE FRAME & DOOR for BCF and BCR are in separate carton

#### ❖ **Instruction**

- **STEP 1:** Put the face frame (A) face down on a flat soft working surface. Install Front Side Panels (B): insert right and left front side panels (B) into the grooves of face frame (A) and align the metal clip. Lock the metal clip with a screwdriver by turning the screw 180° degree clockwise.
- **STEP 2:** Install the top and bottom: gently spread side panels and insert top (E) and bottom (D) into the grooves of side panel (B) until it touches the face frame (A). Well align it and lock each metal clip.
- **STEP 3:** Install Rear Side Panels (C): position rear side panels (C) so that the panel connectors align to the top panel (E), bottom panel (D), and front side panel (B). Gently work the panels into position. Make sure that it fits well and lock the metal clips
- **STEP 4:** insert the shelf clips into the holes in the cabinet side panels at the desired height and slide in the shelves (G)

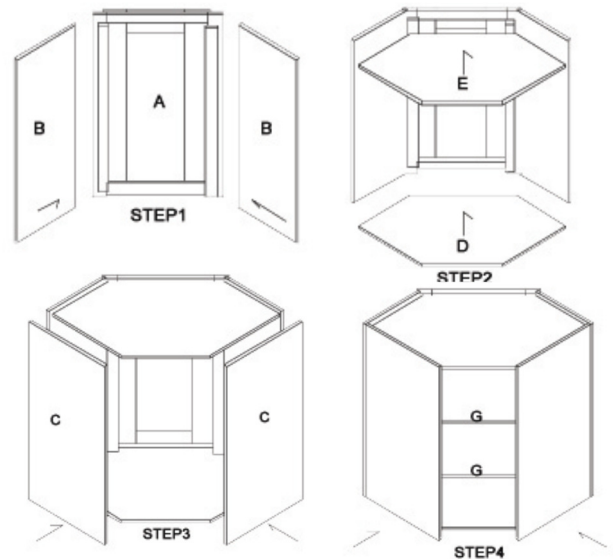




## FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION


- **STEP 5:** Install the back panel: Slide the back panel (F) into grooves of rear side panel (C). Make sure the finished side of panel is towards the inside of the cabinet. Once the back panel is assigned and fitted tight, secure it with the 3/4" Back Panel screws into the pre drilled holes on the back panel.
- **STEP 6:** Install Corner Braces: place the Corner Braces on each top front corner and bottom front corner of the cabinet and secure them with 1/2" Corner Brace screws. Your wall cabinet is now completely assembled.

To install the wall cabinet(s), confirm the condition of the wall (e.g., drywall, concrete, tiles) for proper method of the cabinet installation.

**Example:** To install the cabinet(s) on the drywall, run a stud finder along the drywall

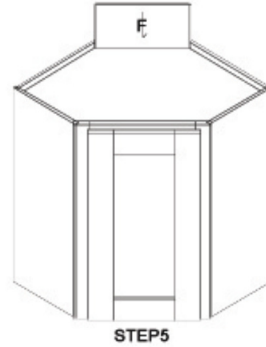

STEP5

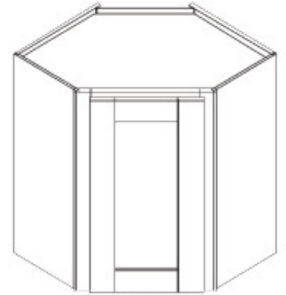

STEP6